

VI.5.3D-ESPADJQ PROGRAM FCST HCL TECHNIQUE ESPADJQ

Purpose

Technique ESPADJQ sets whether Operation ADJUST-Q will be used in the ESP conditional simulation.

Valid values are NO (0) and YES (1).

The Global default is NO (0).

This Technique is Universal.

Form of Input

ESPADJQ(integer)

where integer is 0 or 1 specifying whether or not Operation ADJUST-Q will be used in the ESP conditional simulation

Example

ESPADJQ(1)

Operation ADJUST-Q will be used in the ESP Conditional Simulation.